


Always inspect that voltage is correct on all motors before supplying power.

After power is supplied be sure that motors are running in correct direction. If incorrect exchange two power connections (R,S,T).

This document is for general reference and is not intended to replace the diagram as supplied with your unit. If you do not have any documentation please contact our service representative.

Installation should be performed by a qualified licensed electrician. Bergman Industrial Filters or the GMSi Group are not responsible for damage or injury due to improper installation or application.

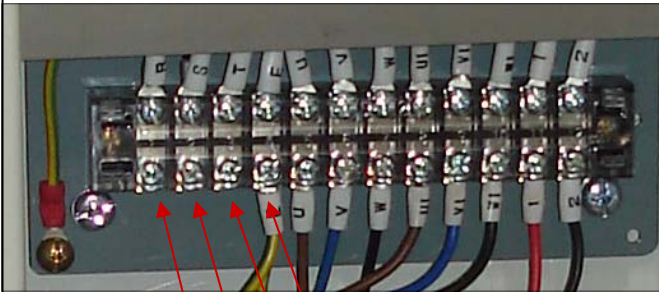

E = Ground

- 220V
- 230V
- 380V
- 415V
- 460V
- 50HZ
- 60HZ

R S T E

